

Connecting an HID Reader to EWS controller

APPLICATION NOTE

ONLine Access

The application note explains what settings to be made in PROS software when HID Reader is connected to EWS controller

A007

- Right click on the reader and select **"Properties"**
- In the "Basic" tab, for Reader Type leave the default setting ("Proximity")
- In the "Basic" tab, for Wiegand Type select **"Wiegand26 no parity"**
- Click "Save & Exit"

Portals\192.168.1.214\Site 3_T&A\IN\Clock IN

Basic Free Access Time Zones Biometric

Name: Clock IN

Type: Proximity

Door: IN

Wiegand type: **Wiegand26 no parity**

Enable access by time zones: ☒

Bypass Antipassback: ☐

Exit from: Inside

Entry to: Inside

Antipassback reset time: 00:00

Free access 24/7: ☐

If 0 illegal attempt, disable for 0 minutes

Save & Exit