 






## APPLICATION NOTE



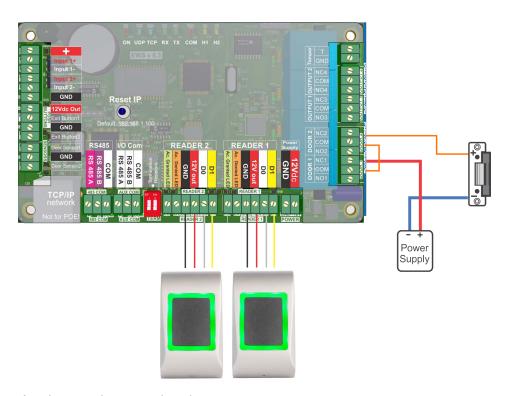


If Strike is used connect the relays in series

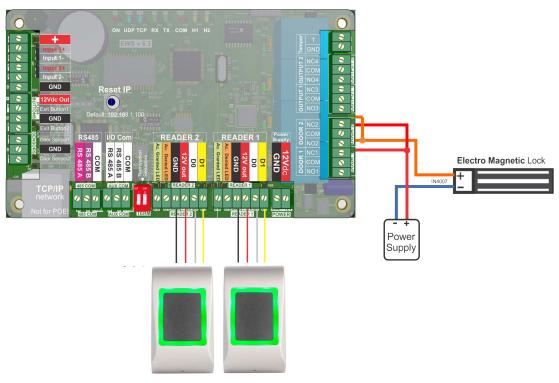


If Magnet is used connect the relays in parallel



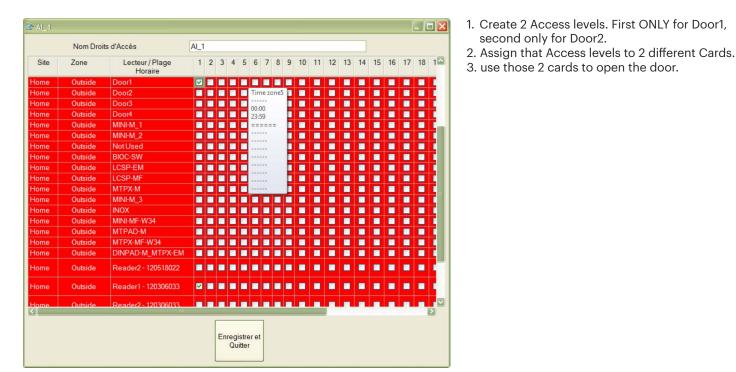

second only for Door2.

≛ AL\_1 AI\_2 Site Lecteur / Plage 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 Zone Horaire п Н В V o \_\_\_\_ lome 0000000 MINI-M Outside MINI-M 2 В Home Outside Not Used 866666 Outside Ē Home LCSP-MF 888888 MTPX-M 00000 Outside MINI-M 3 8 Outside пп lome Outside 00000 Outside MTPX-MF-W34 \_\_\_\_ DINPAD-M\_MTPX-EM Outside Reader2 - 120518022 п Outside Reader1 - 120306033 п п п Quitter

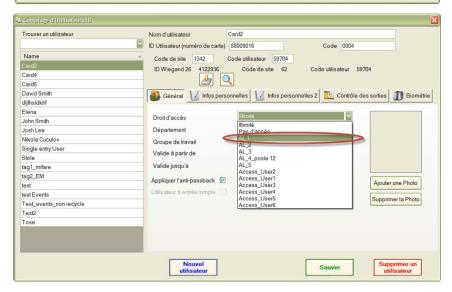

All product specifications are subject to change without notice

