

Connecting wiegand readers in parallel

APPLICATION NOTE

ONLine Access

How to connect two
wiegand readers in
one wiegand input

A054

We are not encouraging readers to be connected in parallel, but if there is a need for that, it can be done.

Use any type of regular diode to separate them. Follow the diagram given below, where the diode's cathode is directed towards the reader.

