 



USING CREDIT IN OFF-LINE READERS


(MTPX-MF-SA, DINMTPX-MF-SA, AL500-MF, HL1000-MF)


APPLICATION NOTE



- Go to "Doors", select the desired door that will use credit and enable the feature "use credit". Additionally, you can edit how many credits will be deducted with each card punch.
- Issue Init Card and present it to the reader, if the door was just created, or issue a config card and present it to the reader, if the door was already created.
- With "read card" you can check if the card was properly created.

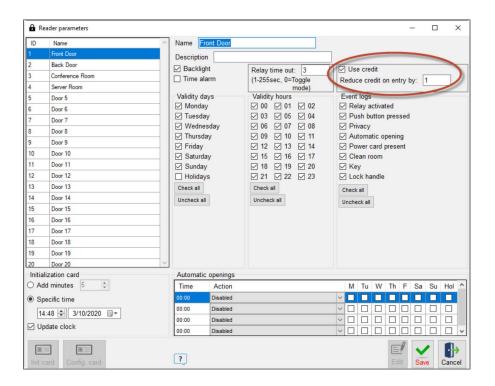


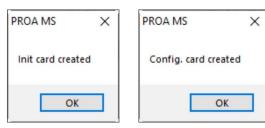

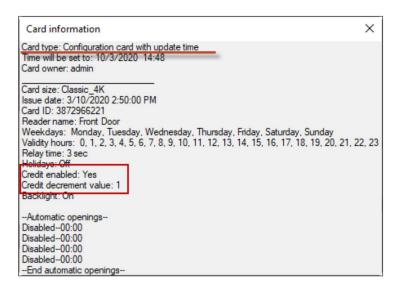




- Go to "Users", create new user, enable "Use credit" function and "Save" the user. Issue the card.

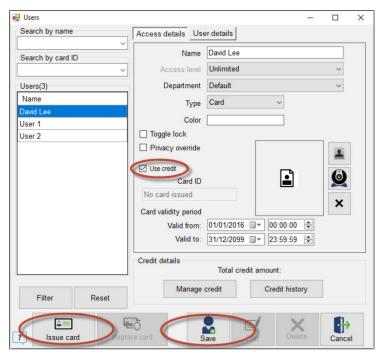



- Then go to "Manage Credit" and add the amount of credit for that user. Check the card with "read card" and see if the credit is written.



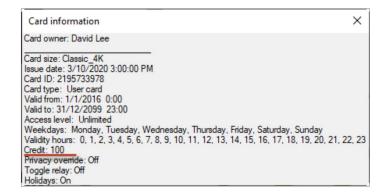

Punch the card on the reader couple of times and see if the credit is deducted from the card.

