

## APPLICATION NOTE

ONLine Access

How to set Global Anti-passback in PROS CS


A030

GAPB enables more doors to be put in Anti-passback.

Different doors can be put in different GAPB groups.

The EWS controller must have firmware version 3.0 or higher. The PC with the PROS CS software must be ON all the time in order the GAPB to function. If the PC is off, the controller works in normal mode, without GAPB.

1. Right click on Global APB group and **ADD new**.

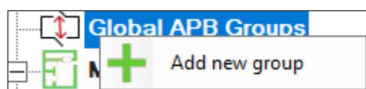

2. In the left column, **select the controllers** that will be in Global Anti-Passback. Their readers will be automatically displayed. From those displayed Readers, **select only the IN readers**. The rest of the readers will automatically become OUT readers.

3. Right click on each **controller/properties/APB** tab.

Ones the controller is put in GAPB group, the APB feature is disabled automatically, since this controller already works in Global Antipassback.