


APPLICATION NOTE



Any Bar code scanner with RS232 output can be used. The system is tested with Newland FM430 Barracuda - fixed mount barcode scanner.

WIRING

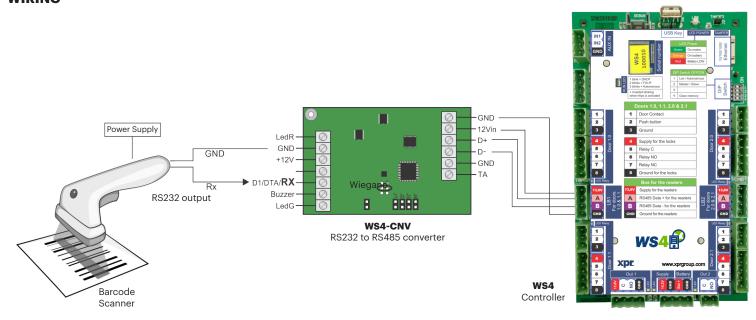



Set the bar code scanner to 9600 bps.

SETTINGS IN THE SOFTWARE

Set reader to "Bar code".



