

Activate output in time zone in WS4 system

 
APPLICATION NOTE

Web Access

How to activate
an output
in time zone

C005

1. Make a schedule in which you want the output to be activated automatically.



2. Go to Settings/System options and assign the created schedule for the desired output.

