


APPLICATION NOTE



WIRING

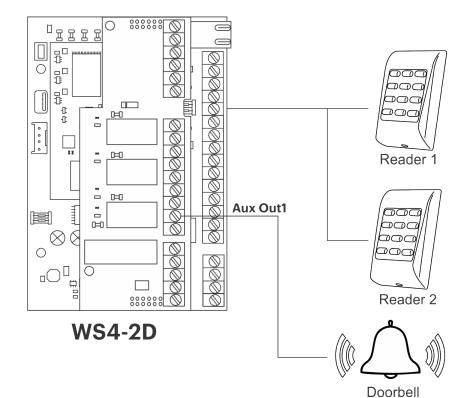

Connect a doorbell on the Auxiliary Output 1. Use keypads for activating the doorbell. Press key A and the aux output 1 will be activated for 1 second, which will ring the bell for 1 second.

SETTINGS IN THE SOFTWARE

Go to Settings/System options and for Aux Out 1 select "Bell".

After this selection, each time you press A, the Aux Output 1 will be activated for 1 second.

<	System options	
ALARMS Time of an alarm cycle : 60 sec. Maximum number of successive cycles : 5 Alarm if box opened Alarm if reader tamper Alarm if mains failure Alarm if battery low Alarm if glass broken	Auxiliary Inputs & Outputs Aux IN 1: Not used Aux IN 2: Not used Aux OUT 1: Bell Aux OUT 2: Not used	?
ATUSS ABTIONS	3	



