







## APPLICATION NOTE

PROX-USB is an USB desktop proximity reader that enables easy card enrollment.

## **FEATURES**

- Reads EM Proximity Cards 125KHz, Mifare Cards 13,56MHz (Classic, Ultralight, Desfire), HID and AWID Compatible Cards
- No installation or drivers
- USB powered
- · Compatibility: Windows, 7, 8, 10


## **ENROLLING CARDS**

Plug the Desktop Reader in the PC and the device is installed automatically.

- 1. Open the PROS CS (or BIOMANAGER) Software
- 2. Go to User Menu and click on "New User"
- 3. The Reader's icon will be enabled if the reader is connected (fig. 1.1)
- 4. Place and leave the card (tag) on the Desktop Reader
- 5. Select the Card type (fig .1.2)
- 6. Click the reader's icon and the number will be read out and presented in the field "User ID" (fig 1.3)





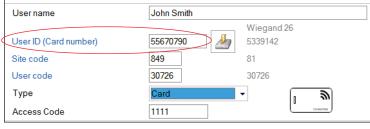

1.3

## **READ CARD DETAILS**

- 1. Place and leave the card (tag) on the Desktop Reader
- 2. Click on "Read Card Details"

The software will show the type of the card, its serial number, the serial number presented as 3 byte Wiegand 26 number, if the Card ID is already enrolled or not and if the card has written fingerprint inside the memory (Mifare Cards Only).



