

APPLICATION NOTE

Web Access

Anti-passback (APB)
at WS4 Controller

C020

1. Log on WS4 using user name and password.
2. Go to section “**Doors**”.
3. Select door for Anti-passback function.



4. When a door is selected new window will pop-up.
5. Select “**Anti passback(APB)**” function.
6. Click on “”.

GENERAL [id:1] ?

Name of the access : cancello principale Group : 1

Type of access : Door Access with 1 reader

Location : Input / Output Lock time : 1 sec.

☐ Toggle mode ☒ **Anti-passback (APB)** ☐ Interlock

☐ Manage an elevator ☐ Unlock if emergency

FREE OUTPUT PUSH BUTTON ?

Active period :

READER A ?

Cabling : on LB1, reader at address 0 (jumper opened)

Location : Input

Card : 125kHz (EM4100)

Keypad : ☒ Fingerprint : ☐

DOOR CONTACT ?

Type : Not connected

FREE & FORBIDDEN PERIODS ?

Free periods :

Forbidden periods :

- If this option is checked, the system will only allow access if the user is in the correct zone. For example, for a user to enter the building, his last access should be an exit, and vice versa. A user may also be in “**Neutral**” meaning that the system does not know (yet) where he is and it will be updated during the next access to an entrance/exit doors.
- This function is incompatible with the “**Toggle**” and “**Neutral**” location.
- **Attention! The Anti-passback mode is not available on slaves, because only the master knows the situation of the users!**