

APPLICATION NOTE

Web Access

Interlock function at the WS4

C014

Each WS4 (master or slave) of your installation can manage only one Interlock, which may therefore contain 2 to 4 doors. In the Interlock, if one door is unlocked or open, all others are locked and access requests will be denied. Check this option if you want this door to be part of the Interlock.

To use the Interlock mode, you must use a door contact and the Mode toggle cannot be activated.

1. Log in at WS4:

2. Under "Door" section select witch reader to be part of the interlock.

After selection witch reader to be part of the interlock, select "Interlock" section in order reader to be part of this function. Also door contact needs to be set. Select type of contact used at the door. Also alarm can be add in case door to remain open too long, or break-in. Then click on



ID	IO	Name	Group	APB	Lock	Emg	Public
1.0	I	MTPAD-WITH CNY/Address 1.0	0				
1.1	O	MTPAD-MHWO GENERATION 2/Address 1.1	0				
2.0	I	MTPAD-MHWO GENERATION 2/Address 2.0	0				
2.1	O	MTPAD-MHWO GENERATION 2/Address 2.1	0				