

# **B100PROX-EH-SA v2** **B100PROX-MF-SA v2**

**EN**

**xpr**

*Standalone Biometric Reader*



## INSTALLER'S MANUAL

# CONTENTS

<b>1. INTRODUCTION</b>	2
<b>2. MOUNTING</b>	3
<b>3. SPECIFICATIONS</b>	4
<b>4. APPLICATION DIAGRAM</b>	4
<b>5. RECOMMENDED SWIPING TECHNIQUE</b>	4
<b>6. INDICATION</b>	4
<b>7. WIRING</b>	5
<b>8. ADDING ADMIN FINGER</b>	6
<b>9. PAIRING - BIOMETRIC READER AND REMOTE RELAY UNIT</b>	7
Pairing B100PROX-SA v2 with DINRTT	7
Pairing B100PROX-SA v2 with RTT	7
Pairing B100PROX-SA v2 with RU2	7
<b>10. ADMINISTRATOR PROGRAMMING</b>	8
ADD finger relay 1	8
ADD finger relay 2	8
ADD finger relay 1&2	8
DELETE finger	9
DELETE ALL fingers	9
CHANGE ADMIN finger	9
CHANGE INSTALLER finger	9
Administrator programming block diagram	10
<b>11. INSTALLER PROGRAMMING</b>	11
Set relay 1 time	11
Set relay 2 time	11
BUZZER ON/OFF	11
BACKLIGHT ON/OFF	11
Installer programming block diagram	12

## 1. INTRODUCTION

B100PROX-SA v2 is access control fingerprint reader designed for easy management of the users and configuration. The scanner is made with advanced capacitive sensing technology that provides some advantages over optical solutions like:

- making almost impossible to make fake copy of the users fingers
- same performance in the different light conditions
- good reading of fingers with stains from daily jobs

Built in strong scanning and matching algorithm provides excellent tolerance in the way finger is swiped over the sensor reducing to minimum the need to repeat finger swiping at the sensor.

The reader can store up to 99 finger templates and 2000 cards. One template is reserved for User manager (Administrator), one template is reserved for Reader configuration (Installer) and up to 97 templates are for Users.

This manual is used for both B100PROX-EH-SA (EM/HID Cards) and B100PROX-MF-SA (Mifare Cards).

## RECOMMENDATIONS

Consult with installer about safety level of the installation. There are devices with relays compatible with this reader that can increase the security of the system if needed. One or two enrolled fingers are enough for one user. Ask the installer before he leaves the site to enroll your finger as administrator.

## NOTES

The Reader is using physical roughness of the fingerprint to scan the finger. Some of the users may have very flat fingertips, making difficult for the sensor to recognize correctly the fingerprint. In most cases, these are children and older persons. To solve this problem, do the following:

1. Try with different user's fingers to find the "best" finger.
2. Check with the installer other models of the reader with added card reader or keypad for other type of access.





## MAINTENANCE

No special or periodic maintenance is required. If cleaning is needed, use soft wet cloth and wipe gently the dirt. Do not use chemicals and materials that can scratch the sensor.

## WARNING!

Do not touch the sensor with other objects than finger. Do not pour or splash with water or other liquids. When painting or construction work is ongoing in the area around the reader, protect the reader sensor area from possible damages and paint. If reader is to be dismantled or relocated, call authorized installer for the job. Disposal of this product must be handled according to all national laws and regulations.

## 2. MOUNTING

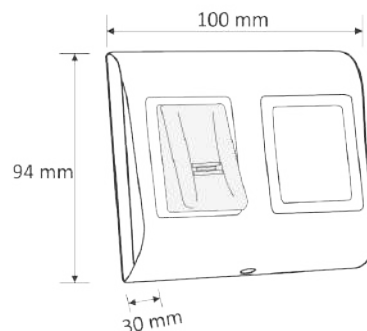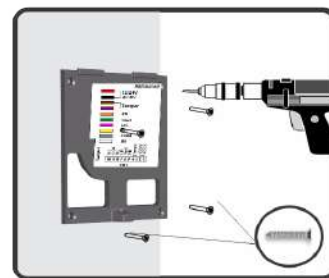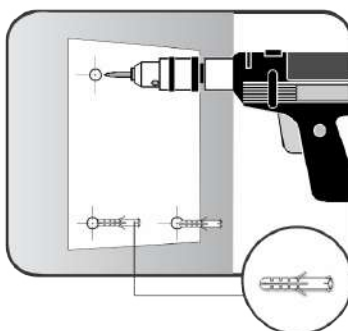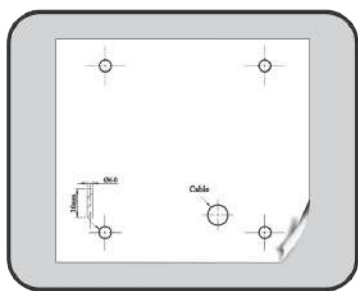

Do not install the device and cabling close to a source of strong electro-magnetic fields like radio-transmitting antenna.

Do not place the device near or above heating equipments.

If cleaning, do not spray or splash water or other cleaning liquids but wipe it out with smooth cloth or towel.

Do not let children touch the device without supervision.


Note that if the sensor is cleaned by detergent, benzene or thinner, the surface will be damaged and the fingerprint can't be entered.

The operating temperature of the product is between 0°C - + 50°C. XPR™ cannot guarantee the functionality of the product if measures and advice before are not followed.

### 3. SPECIFICATIONS

Fingerprint Capacity:	97 templates
Prox. cards Capacity:	2000 cards
Card Type:	EM or HID compatible (125KHz) - B100PROX-EH-SA or Mifare (13,56 Mhz; Classic 1K & 4K, Ultralight, Desfire) - B100PROX-MF-SA
Panel Connection	Cable, 0.5 m
Output:	1 x Relay (2A/24V AC/DC)
Push Button Input:	Yes
Door Open Time:	Pulse (1 to 30 seconds) or Toggle (ON/OFF)
Entry Mode:	Finger or Card
Programming:	By swiping
Master/Admin Fingers:	1 Administrator and 1 Installer Finger
Backlight ON/OFF:	Yes
Buzzer ON/OFF:	Yes
Firmware upgrade:	Via RS-485 converter and windows application
Current Consumption:	150 mA max.
Power Supply:	9-14 V DC
Indication:	Tricolor Status LED
IP Factor:	IP54 (internal use only)
Operating Temperature :	0°C to 50°C
Operating humidity:	5% to 95% RH without condensation
Dimensions(mm):	100 x 94 x 30

### 4. APPLICATION DIAGRAM

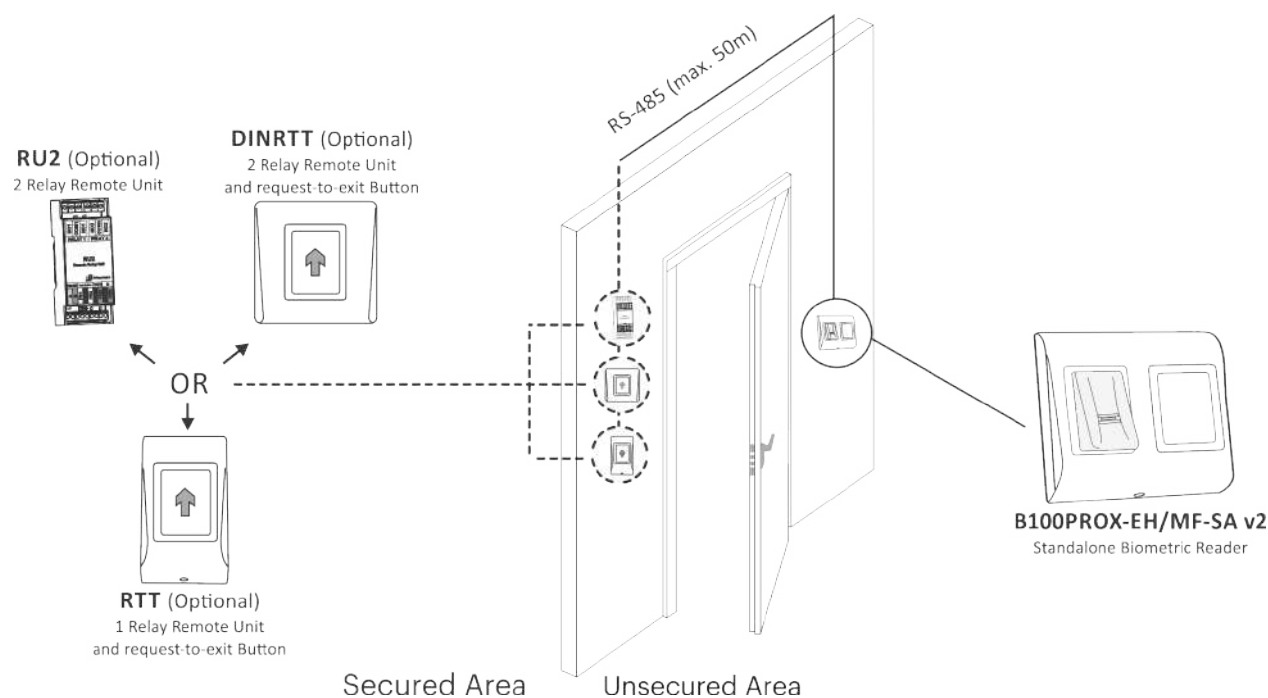

### 5. RECOMMENDED SWIPING TECHNIQUE




Follow the below instructions for correct finger swiping. Starting from the first finger joint, place the selected finger on the swipe sensor and move it evenly towards oneself in one steady movement.

#### Result:

For a valid swipe: Tricolour Status LED turns green + OK Beep(short + long beep)

For an invalid or misread swipe: Tricolour Status LED turns red + Error Beep ( 3 short beeps)

### 6. INDICATION

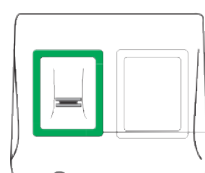


**Tricolor Status LED**  
**Green** - Access Granted  
**Red** - Access denied  
**Orange** - Idle Mode

**OK Beep** - short + long beep

**Error Beep** - 3 short beeps


**Swipe Finger** - 2 short beeps

## 7. WIRING

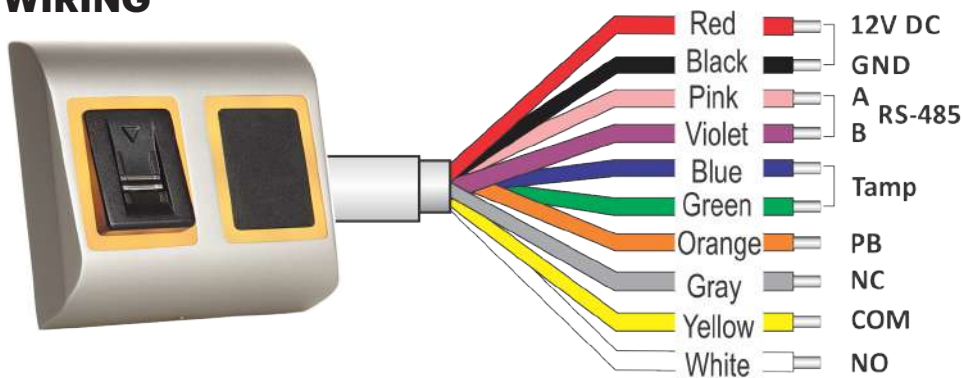


Colour	Connection
Red	12V DC
Black	GND
Green	Tamper
Blue	Tamper
Orange	Push Button
Pink	A (RS-485)
Violet	B (RS-485)
Grey	NC
Yellow	COM
White	NO


Wiring B100PROX-SA with magnetic lock

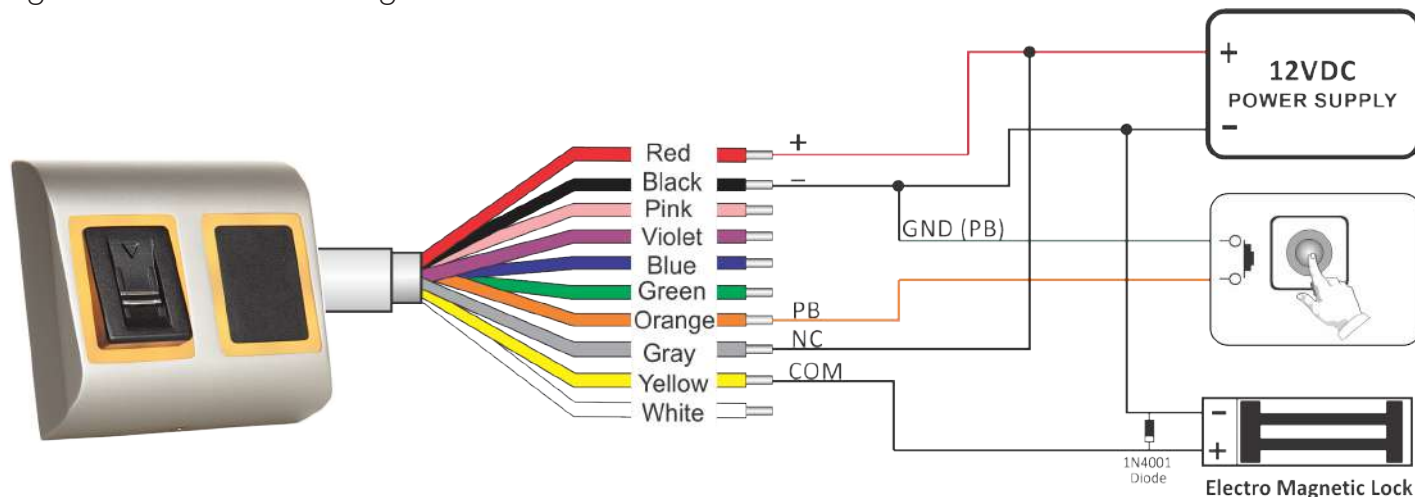

Wiring B100PROX-SA with electric strike

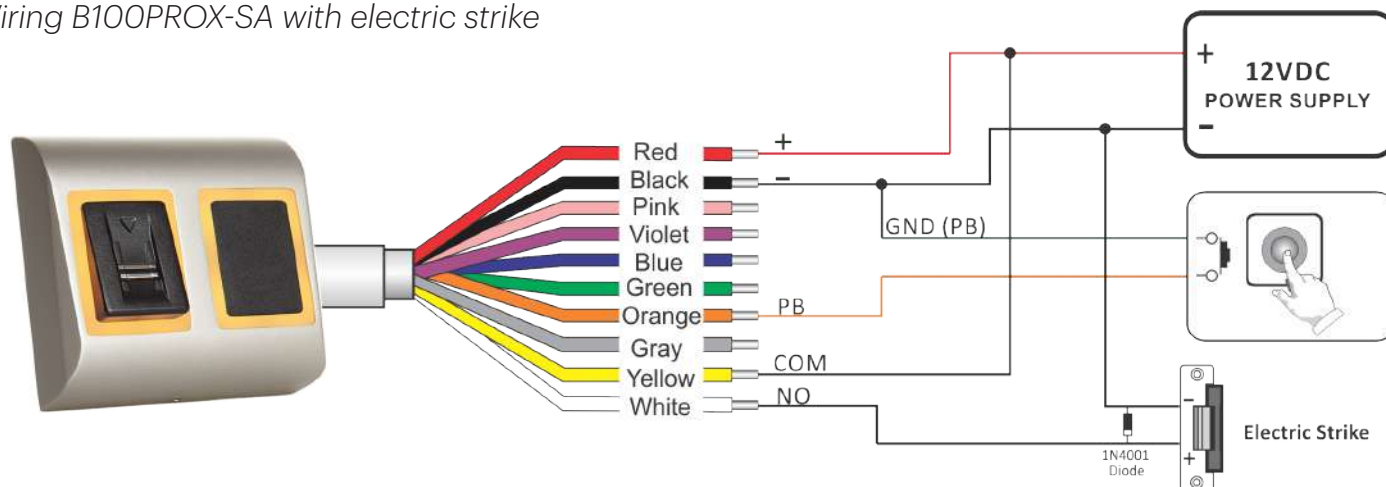

DIPSwitch settings

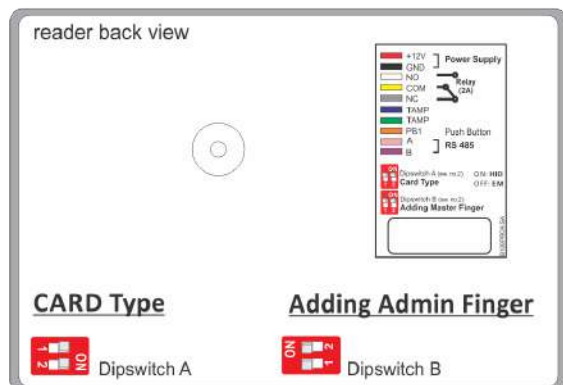

Only in B100PROX-EH-SA v2

Dipswitch A: **Card Type**



ON: **HID**  
 OFF: **EM**

Switch No. 2

Dipswitch B: **Adding Admin Finger**



Switch No. 2

## 8. ADDING ADMIN FINGER

1.Push dip switch no.2 in position ON.



2.Reset the Power of the device.



3.Wait for One long + multiple short beeps

4.Put the dip switch in position OFF. (short beeps will stop)



5.Wait for about **15 seconds** for the LED to blink in **Orange**.



6.Swipe the Master finger **min.6 times**. (Until Ok Beep)




**Warning:** This procedure also deletes all the users, the installer's finger, installer's PIN Code and admin's PIN Code.

**Warning:** This procedure will unpair the connected relay unit (RTT, DINRTT or RU2)

## 9. PAIRING - BIOMETRIC READER AND REMOTE RELAY UNIT


If secure installation is needed, the reader can be connected to remote relay unit at secured area, which also can play the role of request-to-exit push button. Follow the instructions below to pair (couple) both devices or refer to the Remote Relay's Manual.

### Pairing B100PROX-SA v2 with DINRTT

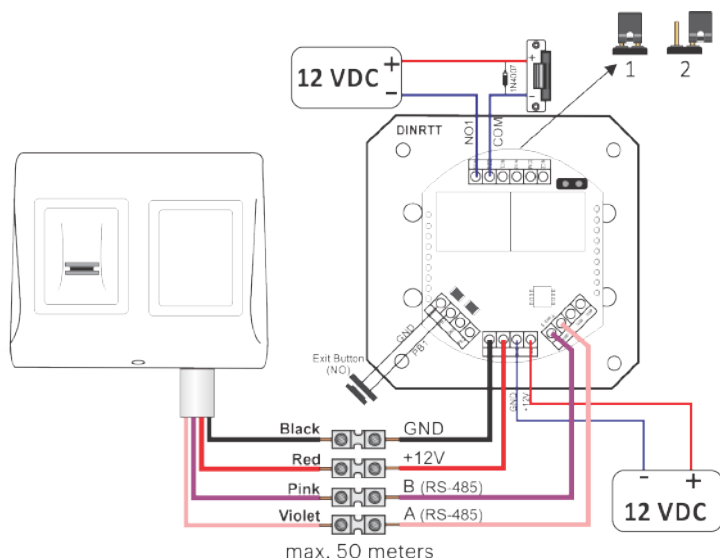


1. Close the Jumper. DINRTT beeps continuously and the red led blinks.
  2. Open the Jumper
  3. Wait for Beep + OK Beep (short + short + long beep)
- After the OK beep, the coupling is done.

### Pairing B100PROX-SA v2 with RTT

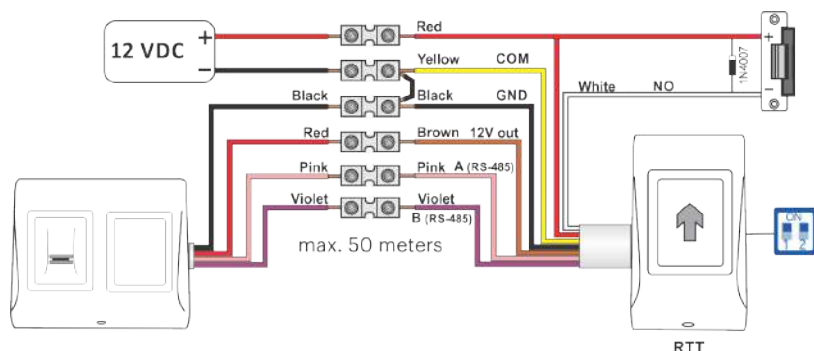

1. Put Dipswitch No.1 to position ON. RTT beeps continuously and the red led blinks.
  2. Put Dipswitch No.1 to position OFF.
  3. Wait for Beep + OK Beep (short + short + long beep)
- After the OK beep, the coupling is done.

### Pairing B100PROX-SA v2 with RU2

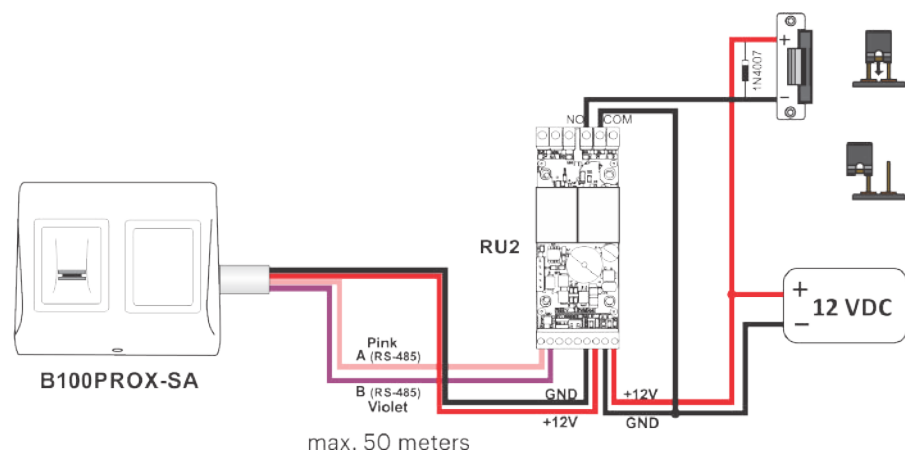

1. Put the Jumper to closed position. RU2 beeps continuously and the red led blinks.
  2. Put the Jumper to open position.
  3. Wait for Beep + OK Beep (short + short + long beep)
- After the OK beep, the coupling is done.


**Warning:** Changing the ADMIN finger will also unpair the remote relay unit.







## 10. ADMINISTRATOR PROGRAMMING

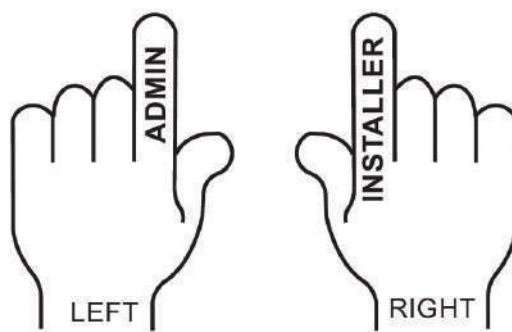Use point fingers as Administrator and Installer. You can use the other fingers as access fingers.

Administrator finger is enrolled at the end of the system installation. Initial enrollment of the Admin finger is described in installer manual.







### ADD Finger Relay 1 (Finger that will activate on board relay 1)

Action	Finger	Backlight	Buzzer Sound
Swipe Admin Finger 1 time	 x 1	 slow blinking	short beep
Wait 5 seconds (until fast blinking)			short beep
Swipe User Finger min. 6 times (until short + long beep)	 x 6	 fast blinking	short + long beep

**or**

Present card/tag 1 time	 x 1	 fast blinking	short + long beep
-------------------------	--	--	-------------------

### ADD Finger Relay 2 (Finger that will activate remote relay 2)





Action	Finger	Backlight	Buzzer Sound
Swipe Admin Finger 2 times	 x 2	 slow blinking	short beep
Wait 5 seconds (until fast blinking)			short beep
Swipe User Finger min. 6 times (until short + long beep)	 x 6	 fast blinking	short + long beep

**or**


Present card/tag 1 time	 x 1	 fast blinking	short + long beep
-------------------------	---	---	-------------------

Relay 2 is available if the reader is used with remote relay unit with 2 relays(DINRTT and RU2). Consult the installer if Relay 2 is available in your system.

### ADD Finger Relay 1&2 (Finger that will activate relay 1&2)

Action	Finger	Backlight	Buzzer Sound
Swipe Admin Finger 3 times	 x 3	 slow blinking	short beep
Wait 5 seconds (until fast blinking)			short beep
Swipe User Finger min. 6 times (until short + long beep)	 x 6	 fast blinking	short + long beep





**or**

Present card/tag 1 time	 x 1	 fast blinking	short + long beep
-------------------------	---	---	-------------------



Relay 2 is available if the reader is used with remote relay unit with 2 relays(DINRTT and RU2). Consult the installer if Relay 2 is available in your system.








## DELETE Finger

Action	Finger	Backlight	Buzzer Sound
Swipe Admin Finger 4 times	 x 4	 slow blinking	short beep
Wait 5 seconds (until fast blinking)			short beep
Swipe User Finger	 x1	 fast blinking	short + long beep






**or**

Present card/tag 1 time	 x 1	 fast blinking	short + long beep
-------------------------	---	---	-------------------






## DELETE ALL Fingers and Cards

Action	Finger	Backlight	Buzzer Sound
Swipe Admin Finger 4 times	 x 4	 slow blinking	short beep
Wait 5 seconds (until fast blinking)		 slow blinking	short beep
Swipe Admin Finger 2 times	 x2	 fast blinking	multiple beeps

## CHANGE ADMIN Finger


Action	Finger	Backlight	Buzzer Sound
Swipe Admin Finger 5 times	 x 5	 slow blinking	short beep
Wait 5 seconds (until fast blinking)		 slow blinking	short beep
Swipe NEW Admin Finger min.6 times	 x6	 fast blinking	short + long beep

## CHANGE INSTALLER Finger

Action	Finger	Backlight	Buzzer Sound
Swipe Admin Finger 6 times	 x 6	 slow blinking	short beep
Wait 5 seconds (until fast blinking)		 slow blinking	short + long beep
Swipe NEW Installer Finger min.6 times	 x6	 fast blinking	3 short beeps





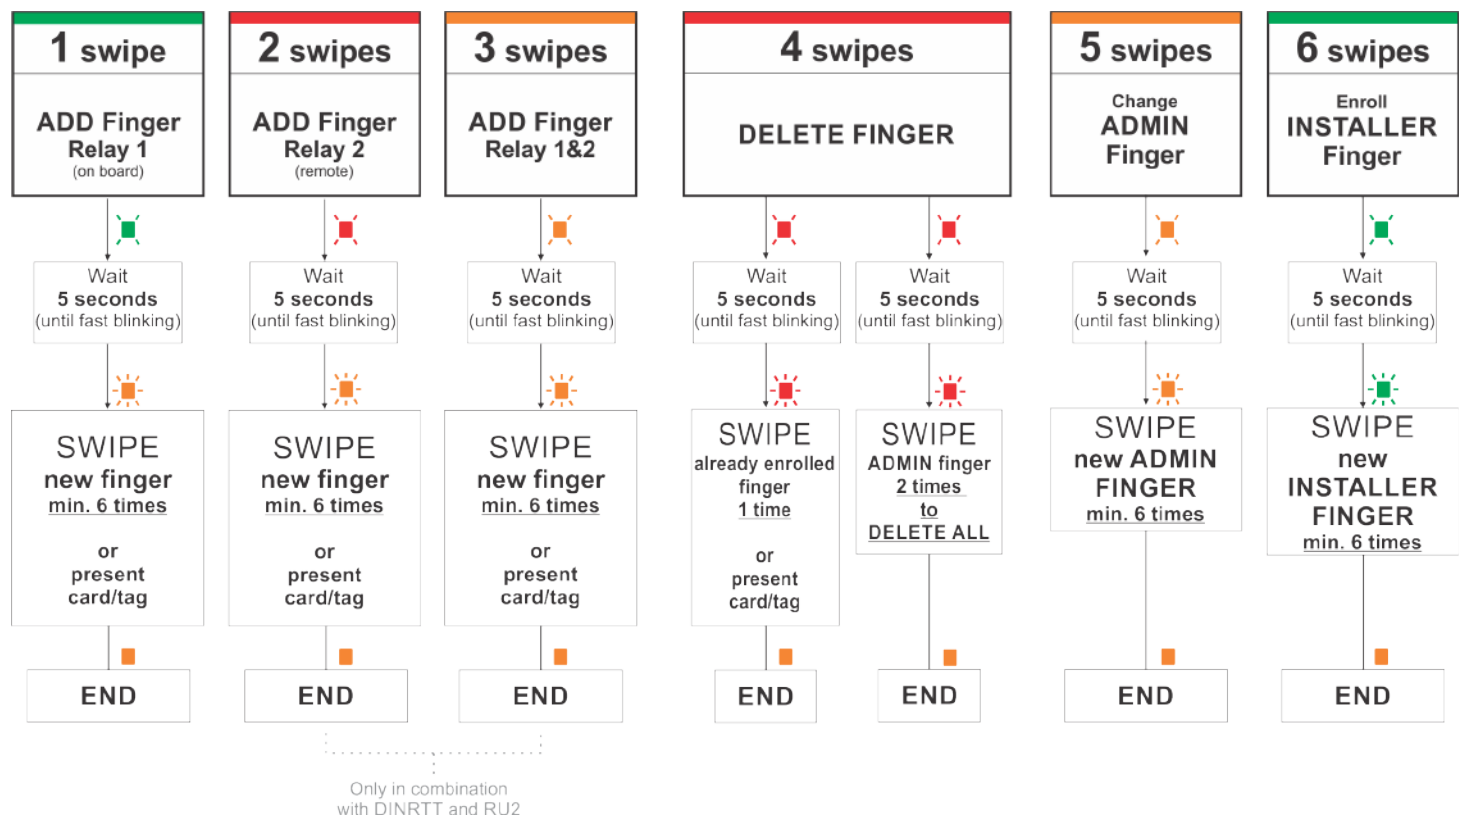

# ADMINISTRATOR PROGRAMMING BLOCK DIAGRAM

Swipe the **ADMIN** Finger 1 to 6 times depending of the desired menu









# INSTALLER PROGRAMMING BY FINGER

## Set Relay 1 Time (on board)





Action	Finger	Backlight	Buzzer Sound
Swipe Installer Finger 1 time	 x1	 slow blinking	short beep
Wait 5 seconds (until fast blinking)			short beep
Swipe the INSTALLER Finger and start counting seconds	 x1	 fast blinking	beeps on 1 second
Swipe the INSTALLER Finger to stop or wait 30 seconds to put the relay in toggle mode	 x1	 fast blinking	short + long beep

## Set Relay 2 Time





Action	Finger	Backlight	Buzzer Sound
Swipe Installer Finger 2 times	 x2	 slow blinking	short beep
Wait 5 seconds (until fast blinking)			short beep
Swipe the INSTALLER Finger and start counting seconds	 x1	 fast blinking	beeps on 1 second
Swipe the INSTALLER Finger to stop or wait 30 seconds to put the relay in toggle mode	 x1	 fast blinking	short + long beep

Relay 2 is available if the reader is used with remote relay unit with 2 relays (DINRTT and RU2). Consult the installer if Relay 2 is available in your system.

## BUZZER ON/OFF

Action	Finger	Backlight	Buzzer Sound
Swipe Installer Finger 3 times	 x3	 slow blinking	short beep
Wait 5 seconds (until fast blinking)			short beep
Swipe Installer Finger	 x1	 fast blinking	short + long beep

## BACKLIGHT ON/OFF

Action	Finger	Backlight	Buzzer Sound
Swipe Installer Finger 4 times	 x4	 slow blinking	short beep
Wait 5 seconds (until fast blinking)			short beep
Swipe Installer Finger	 x1	 fast blinking	short + long beep

# INSTALLER PROGRAMMING BLOCK DIAGRAM

Swipe the **Installer** Finger 1 to 4 times depending of the desired menu

